

Brannan instruction sheet

TWIN READING DIGITAL THERMOMETER

Please fully read the installation instructions before use.

Product features:

- High / low temperature alarm setting (external probe only)
- Celsius / Fahrenheit selectable
- Magnetic fixture on back of meter
- Max / Min temperature memory
- Waterproof temperature sensor

Product specification:

Temperature range: -20 to 50°C/F (room) / -50 to 70°C/F (ext. probe)

Ambient operating temp: -10 to 50°C/F

Accuracy: 0 to +50°C/F: +/-1°C

-20 to -1°C/F and +51 to +70°C/F: +/-2°C

-50 to -21°C/F: +/-4°C

Resolution: 0.1°C

Battery: 1pcs x AAA

Probe length: 2m

Dimensions: 63mm x 63mm x 15mm

Update: 10 seconds

Battery life: Approx 1 year

LCD: 21mm x 47mm

Weight: 62g (incl. battery)

Operating instructions:

1. °C / °F exchange

Press [°C/°F] on the back of the instrument to select temperature unit.

2. Max / Min reading memory

- Press [Max/Min] to display maximum measured value (MAX).
- Press [Max/Min] again to display minimum measured value (MIN).
- Press again to return to normal display.
- Press and hold [Max/Min] for about 2 seconds to reset memory.

3. Probe sensor temperature display

- Press [IN/OUT] to display probe sensor temperature.
- Press [IN/OUT] again to display main unit temperature reading.

4. Probe sensor temperature display

- Press and hold [△] for about 2 seconds. The HIGH and OUT icons will flash.
 - Press [°C/°F] on the back of the instrument to set alarm high limit.
 - Press [△] again. The LOW and OUT icons will flash.
 - Press [°C/°F] on the back of the instrument to set alarm low limit.
 - Press [△] once more to finish setting and return to main unit reading.
- During limit setting, holding down [°C/°F] will advance the value automatically.
If the probe sensor reading is out of the set limit, the alarm will sound.

5. Alarm off or on

- Press [△] to switch off alarm (AL off).
- Press [△] again to switch on alarm (AL on).

Note: The IN reading relates to the sensor on the main unit.

The OUT reading relates to the external probe sensor reading.

Keep out of direct sunlight, rain or extreme heat.



Please dispose of electrical devices in accordance with local regulation.

Manufacturer: S. Brannan & Sons Ltd, Leconfield Industrial Estate, Cleator Moor, Cumbria, UK, CA25 5QE (sales@brannan.co.uk)

EU Authorised Representative: Comply Express Unipessoal Limitada, Startup Madeira EV141, Campus da Penteada, Funchal 9020-105, Madeira, Portugal. (info@complyexpress.com)

brannan.co.uk



REV5.2026

Measurement for life.

