

Brannan Instruction Sheet



Kitchen Digital Timer (28/217/0)

Instructions for Use - Preparing your Timer

Pull out the transparent tape from the battery compartment to activate the battery.
Clear the display by pressing "MIN" and "SEC" buttons at the same time. Display shows "00:00".

To Use Countdown Timer:

Set desired time by either pressing the "MIN" and "SEC" buttons together or by holding down the "MIN" button. The number will automatically advance after the button is held down for 3 seconds. Press "START/STOP" button once to start timing. Alarm will sound when required timing has been reached.

To Use Count Up Timer:

Press "MIN" and "SEC" buttons at the same time. Display will show "00:00".
Press the "START/STOP" button to start count up.

To Stop Alarm:

Press "START/STOP" button.

To Clear Display:

Press "MIN" and "SEC" buttons at the same time. Display will show "00:00".

To Pause Timer:

To pause the timer while it is counting up or down, press the "START/STOP" button once.
Press again to continue timing.

To Change Battery:

Remove screws from battery compartment cover on back of timer. Replace battery with new LR44 ensuring new battery is correctly inserted with "+" polarity facing upwards. Replace the screws into compartment cover.

Battery Warning:

Remove battery if timer will not be used for an extended period
Keep battery away from children.

Care of your Product

Avoid exposing timer to extreme temperature, water or severe shock.
Avoid contact with any corrosive materials such as alcohol or cleaning agents.



Please dispose of electrical
devices in accordance with
local regulation

www.brannan.co.uk

Rev.1.2021

Measurement for Life.

