

Water Resistant Digital Stopwatch

Product Specification:

Stopwatch:	1/100 second stopwatch with split timing function
Clock:	Up to 23 hrs, 59 mins, 59 secs
Calendar:	AM/PM indicator & 12/24 hour selectable
Ingress Protection:	IP65
Battery:	1 x LR44 (fitted + 1pc x spare)



Instructions:

1. Setting Time, Date and Day

When the stopwatch is switched on for the first time, the clock will display 1:0000 and begin counting the seconds. Pressing S2 three times will change to time set mode. Pressing S3 will set the parameter that is flashing and pressing S1 will switch to the next parameter (which will flash to show it is active). Use these buttons to set the time, date and day. Pressing S2 again will return the stopwatch to clock mode. When changing the hours, the clock will go from 1A (am) to 12P (pm), but continued pressing of S3 will go to 0H (24hrs) through to 24H.

2. Setting Alarm Function

Pressing S2 twice will allow the alarm set time to be programmed in the same way as the time and date. To switch the alarm on and off, press S1 and then S3, the ((((-))) will appear. The same action can be used to switch it off. Similarly, pressing S1 and S2 will switch the daily alarm on and off. On activation, pressing S3 stops the alarm sounding.

3. Time, Calendar and Alarm Display

In clock mode, press S3 to display the month, day and week; Press S1 to display the alarm time.

4. Stopwatch Features


From clock mode, press S2 to switch to stopwatch mode. If the stopwatch does not display zero, press S3 to stop timing and press S1 to reset to zero.

4.1. Stopwatch/Chronograph Function

Press S3 to start timing, repress S3 key to stop timing, press S1 key to reset to zero.


4.2. Split Time Function

Press S3 to start timing, then press S1 to display the split time. Pressing S1 will freeze the display at the split time but continue to count the race time. Having noted the split time, press S1 again to show the live timing and S1 again at the next split. At the end of the race, Press S3 to stop timing and press S1 key to reset to zero.

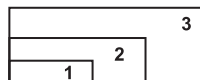

4.3. Two Place, Fast Finish Memory Function

Press S3 to start timing, press S1 to show the first time.
Press S3 to record the second place time (and stop timing).
Press S1 to display the second time, then press S1 to reset to zero.



5. Battery Replacement

If the LCD display goes dark or blank, the battery should be replaced. Open the back cover and take out the old battery. Carefully replace with a battery of the same specification, making sure that the contacts are touching the positive and negative battery terminals, and replace the back cover.

6. Notes on Use

The stopwatch is not waterproof, avoid damp and especially wet conditions.
Avoid prolonged exposure to strong sunlight.
Avoid contact with corrosive substances.
Not to be used in extreme ambient temperatures.

www.brannan.co.uk



Please dispose of electrical devices in accordance with local regulation



Rev.2.2021

Measurement for Life.

