



# Digital Max Min Thermometer with Roof


## Functions:

Displays the maximum and minimum temperatures reached  
°C and °F switchable  
Water resistant



## Specification:

**Measurement Range:** -10°C to 50°C&F  
**Accuracy:** ±2°C  
**Display resolution:** 0.1°C  
**Sampling rate:** 10 seconds  
**Battery:** 1.5 volt (AAA) x 1 piece

Remove the battery cover and insert the AAA battery, supplied.  
The thermometer should be positioned away from direct sunlight and draughts to ensure an accurate reading.  
The minimum reading indicates how low the temperature has dropped, and the maximum reading indicates how high the temperature has risen.  
The current temperature is displayed in the centre of the instrument.  
To reset the readings, press the CLEAR button.  
To switch Celsius to Fahrenheit, press C/F button.

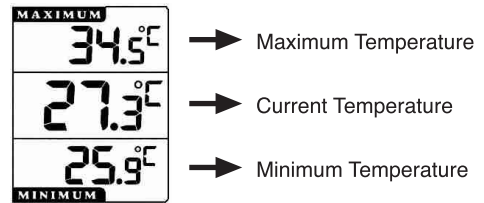

Battery Cover

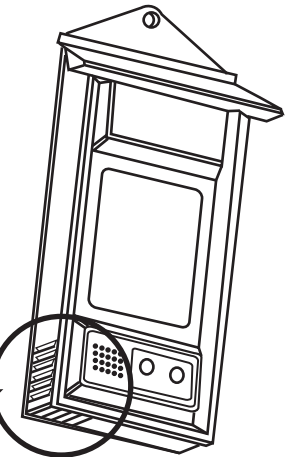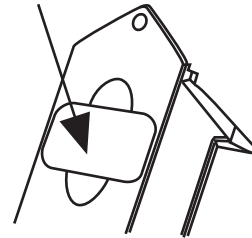

12/428 Rev.1 2012

**Brannan Thermometers**  
Cleator Moor Cumbria  
England  
[www.brannan.co.uk](http://www.brannan.co.uk)

290512