

# Brannan instruction sheet

## DIGITAL MAX MIN THERMOMETER



### Specification:

**Measurement Range:** -20 to 50°C/°F (switchable)  
**Accuracy:** +/-1°C (between 0 and 50°C)  
**Display Resolution:** Current temp: 0.1°C/°F  
Max & Min temp: 1.0°C/°F  
**Battery:** AAA) x 1 piece

### Instructions:

Remove protective film from LCD before use.

Open battery compartment cover and remove tab protecting battery.


The thermometer should be positioned away from direct sunlight, rainfall and draughts to ensure an accurate reading. (NB: This thermometer is not waterproof).

The minimum reading indicates how low the temperature has dropped since last reset

The maximum reading indicates how high the temperature has risen since reset.

To reset the readings, press the CLEAR button.

To switch Celsius to Fahrenheit, press C/F button.

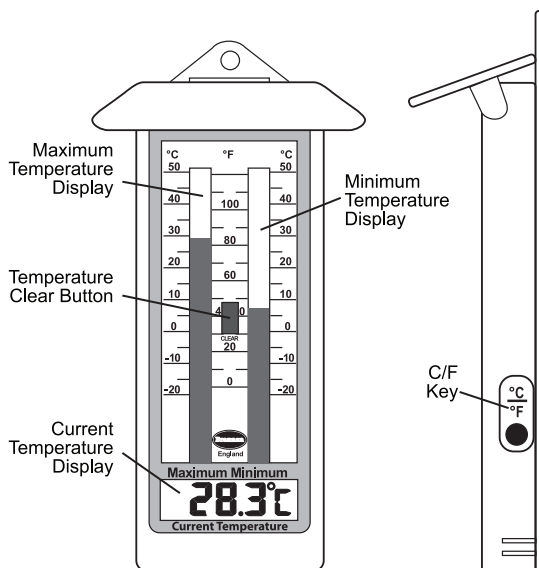

**brannan.co.uk**

Manufacturer: S. Brannan & Sons Ltd, Leconfield Industrial Estate, Cleator Moor, Cumbria, UK, CA25 5QE (sales@brannan.co.uk)  
EU Authorised Representative: Comply Express Unipessoal Limitada, Startup Madeira EV141, Campus da Penteada, Funchal 9020-105, Madeira, Portugal. (info@complyexpress.com)

Rev.0 2022

**Measurement for life.**

