

Quick Set Digital Maximum Minimum Thermometer

Robust digital max min thermometer suitable for indoor or outdoor* use.
Triple display shows maximum, minimum and current temperature simultaneously.

Product Specification:

Measurement Range: -20 to 50°C/°F (switchable)

Accuracy: +/-1°C

Display Resolution: Current temp: 0.1°C/0.1°F
Max/Min temp: 1.0°C/2.0°F

Battery: 1pc x AAA (included)


Instructions:

- Remove protective film from LCD before use.
- Open battery compartment cover and remove tab protecting battery.
- The thermometer should be positioned away from direct sunlight, rainfall and draughts to ensure an accurate reading.
- The minimum reading indicates how low the temperature has dropped since last reset.
- The maximum reading indicates how high the temperature has risen since reset.
- To reset the readings, press the CLEAR button.
- To switch Celsius to Fahrenheit, press C/F button.

Note: Current temperature LCD reads "LL.L" at -20°C and "HH.H" at 49.9°C.

Allow instrument to acclimatise to working environment for one hour before taking temperature measurements

* This instrument is not waterproof.

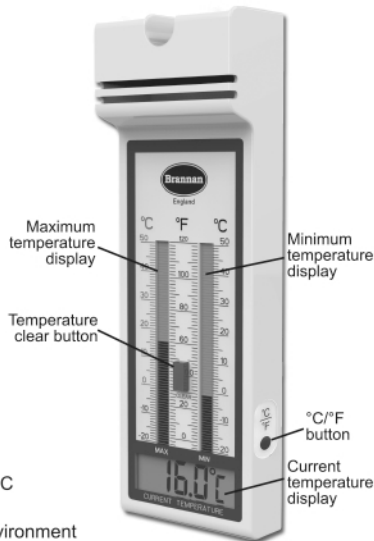

Please dispose of electrical devices in accordance with local regulation

www.brannan.co.uk

UK
CA CE

Measurement for Life.

Brannan