

Brannan instruction sheet

Weatherproof Digital 'Homestead' Maximum/Minimum Thermometer

Robust digital max/min thermometer suitable for indoor or outdoor use.

Triple display shows maximum, minimum and current temperature simultaneously.

Product Specification:

Measurement Range: -20 to 50°C/°F (switchable)

Ingress Protection: IP65

Accuracy: +/-1°C

Display Resolution: 0.1°C/0.1°F


Battery: 1pc x AAA (included)

Instructions:

- Remove tab protecting battery and protective film from LCD before use.
- This thermometer is weatherproof however, where possible, it should be positioned away from direct sunlight, rainfall and draughts to ensure an accurate reading and optimum life of instrument.
- The minimum reading indicates how low the temperature has dropped since last reset.
- The maximum reading indicates how high the temperature has risen since reset.
- To reset the readings, press the CLEAR button.
- To switch Celsius to Fahrenheit, press C/F button.

To change battery:

Due to the IP rating of this thermometer, care should be taken when removing battery compartment cover. Partially unscrew battery compartment cover then place end of screwdriver under the screw to carefully lever compartment cover out. Replace cover securely after changing battery.

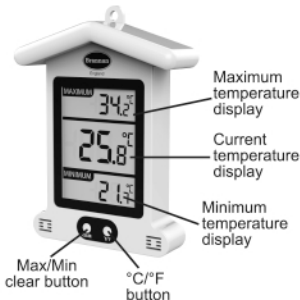

Please dispose of electrical devices in accordance with local regulation

www.brannan.co.uk

UK
CA CE

Rev4_2025

Measurement for Life.

Brannan