

Brannan instruction sheet



Vertical barrel test thermometer (31/160/0)

Product specifications:

Range: -50 to 200°C / -58 to +392°F

Accuracy: -50 to -21°C: +/-4°C

-20 to -1°C: +/-2°C

0 to 100°C: +/-1°C

101 to 150°C: +/-2°C

151 to 200°C: +/-4°C

Resolution: 0.1°C/°F

Sampling: 1 second

Battery: 1 x LR44 (included)

Ambient operating temperature: -10 to 50°C/F


Operating instructions

- Remove tab protecting battery before use.
- Press ON/OFF to switch on thermometer.
- Press °C/°F button to change from Celsius to Fahrenheit.
- Insert probe 50mm (2") into substance to be tested.
- Press ON/OFF to switch off. The thermometer will switch off automatically after 45 minutes of inactivity.

Caution

- Always keep the thermometer head away from direct heat or cold
- The probe is very sensitive - do not use abrasive material to clean the probe
- Do not use in a microwave or conventional oven

Changing the battery

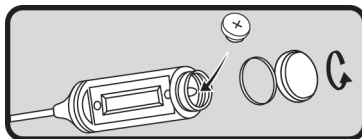

Battery warning

Remove battery if thermometer will not be used for an extended period.

Keep battery away from children.



Please dispose of electrical devices
in accordance with local regulation.

Manufacturer: S. Brannan & Sons Ltd, Leconfield Industrial Estate, Cleator Moor, Cumbria, UK, CA25 5QE
(sales@brannan.co.uk)

EU Authorised Representative: Comply Express Unipessoal Limitada, Startup Madeira EV141, Campus da Penteadá,
Funchal 9020-105, Madeira, Portugal. (info@complyexpress.com)

REV9.2026

Measurement for life.

