

Brannan instruction sheet

FOLDING PROBE THERMOMETER (31/175/0)

Please fully read the installation instructions before use.

Product specification:


Range:	-50 to +250°C/F
Ambient operating temp:	-10 to +50°C/F
Resolution:	0.1°C&F
Sampling Rate:	1 second
Accuracy:	-50 to -21°C: +/- 4°C (8°F) -20 to -1°C: +/- 1.5°C (3°F) 0 to +100°C: +/- 1°C (2°F) 101 to 150°C: +/- 1.5°C (3°F) 151 to 200°C: +/- 4°C (8°F) 201 to 250°C: +/- 5%
Protection:	IP65
Battery:	1 x LR44 (included)
Probe:	180° rotation angle

Operating instructions:

Open battery compartment and remove tab protecting battery.

The thermometer will automatically switch on when the probe is opened by approx 30° angle. It will automatically power off when the probe is closed less than 30° angle.

The switch to change units from °C to °F scale is located inside battery compartment.

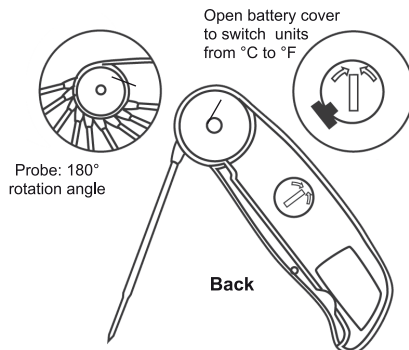

Please dispose of electrical devices in accordance with local regulation

brannan.co.uk

Manufacturer: S. Brannan & Sons Ltd, Leconfield Industrial Estate, Cleator Moor, Cumbria, UK, CA25 5QE (sales@brannan.co.uk)

EU Authorised Representative: Comply Express Unipessoal Limitada, Startup Madeira EV141, Campus da Penteada, Funchal 9020-105, Madeira, Portugal. (info@complyexpress.com)



REV4.2026

Measurement for life.

Brannan