
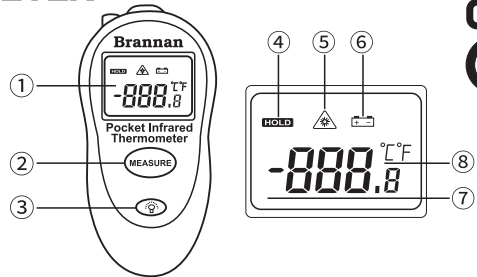


Brannan instruction sheet

POCKET INFRARED THERMOMETER

(38/719/0)

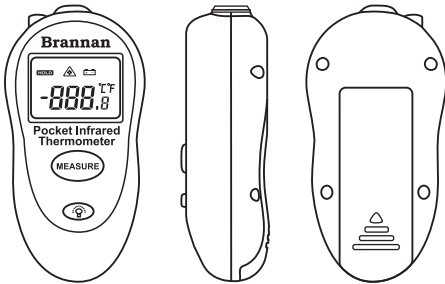

Product features:

- Celsius / Fahrenheit selectable
- Wrist strap
- Low battery indicator

Product specification:

Temperature range: -50 to 260°C (-58 to 500°F)
Repeatability: 1% or 1°C
Display: 3.5 digits
Distance to spot ratio: 2:1
Recommended measurement distance: 20 to 130mm
Working environment: 0 to 50°C / 10 to 95%RH (non-cond.)
Dimensions: 92.5 x 45.0 x 29.5mm

Accuracy: +/- 2% or +/-2°C
Response time: 0.5 seconds
Emissivity: 0.95 fixed
Resolution: 0.1°C&F
Storage temp: -20 to 50°C (-4 to 122°F)
Battery: 2pcs x AAA (included)
Net weight: 65g (incl. battery)

Additional function:

1. °C/°F selection: by pressing both measurement key and LED button simultaneously.
2. Auto power off: after 15 seconds of inactivity.

Taking measurement:

Press the measure button whilst aiming the thermometer towards the object being measured. The meter will turn on and the measured temperature will be displayed.

Battery replacement:

The low battery symbol will appear to indicate the batter power is low. Please change the battery accordingly.

Measurement tips:

Clean surface of the object being measured to ensure free from frost, dust or other materials, to ensure accurate measurement. If the surface of the object being measured is highly reflective with a very low emissivity value, apply a black masking tape or black paint to the surface to improve the accuracy of the measurement.



Please dispose of electrical devices in accordance with local regulation.

Manufacturer: S. Brannan & Sons Ltd, Leconfield Industrial Estate, Cleator Moor, Cumbria, UK, CA25 5QE
EU Authorised Representative: Comply Express Express Unipessoal Limitada, StartUp Madeira, EV141, Campus de Penteada, 9020 105 Funchal, Portugal

brannan.co.uk

Measurement for life.

