

PG010 - BLACK CASE PRESSURE GAUGE



Product features:

- Low price commercial pressure gauge
- Brannan quality and accuracy
- · Wide choice of ranges and dial diameters
- For dry indoor installations
- Wide range of associated accessories available
- UKAS calibration available

Applications:

- · Heating, ventilation, air-conditioning
- Plumbing
- Compressors
- Air filters
- Pneumatics


Standard product specifications:

	40mm, 50mm, 63mm, 80mm & 100mm					
Design	BS EN 837					
Safety category	100mm: S1 (blow-out device gauge). Others: 0 (no blow-out device)					
Accuracy class	.6% (40mm dia: 2.5%)					
Ranges	-1 to 9 bar & psi through to 0 to 1000 bar & psi					
Case	Black steel					
Process connection	1/8", 1/4", 3/8" & 1/2" BSP/NPT/BSPT (others available on request)					
Connection orientation	Bottom, centre back and lower back					
Connection material	Brass					
Bezel	Black steel (80mm & 100mm only)					
Measuring principle	Bourdon tube Cu-Alloy					
Movement	Cu-Alloy					
Window	40mm, 50mm & 63mm: polycarbonate, snap fit					
	80mm & 100mm: Glass					
Pointer	Black aluminium					
Filling	Dry					
Working pressure	Steady: 75% full scale range					
	Fluctuating: 60% full scale range					
	Short time: full scale range					
Operating temperature	Ambient: -20 to +60°C					
	Medium: -20 to +60°C					
Storage temperature	-40 to +60°C					
Temperature effect	When temperature of the pressure element deviates from reference temperature of					
	20°C the maximum additional error is +/-0.4 per 10°C of the span rising and falling					
Protection	IP 43 (BS EN 60529:1992)					
Calibration	UKAS certification, certificate traceable to recognised national standard or					
	statement of conformity, if required					






Dimensions:

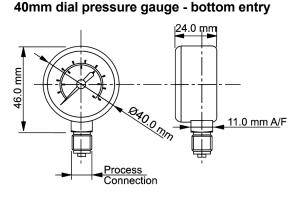


50mm dial pressure gauge - bottom entry

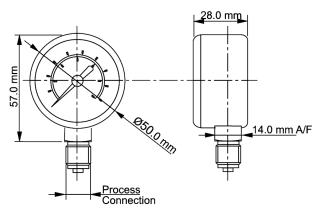


63mm dial pressure gauge - bottom entry


Process Connection 40mm dial pressure gauge - back entry

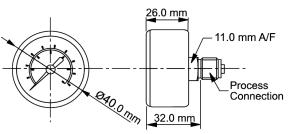

50mm dial pressure gauge - back entry

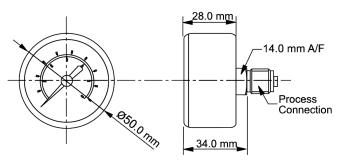

63mm dial pressure gauge - back entry

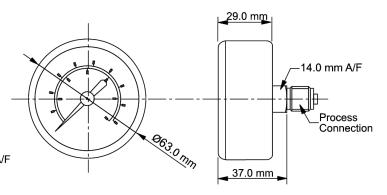







80mm dial pressure gauge - back entry


33.0 mm 33.0 mm 41.0 mm 41.0 mm 41.0 mm 41.0 mm



100mm dial pressure gauge - back entry

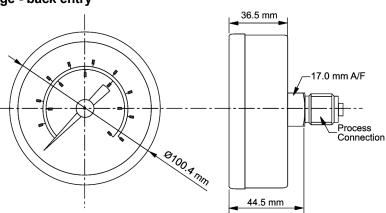





+44 (0)1946 816600

brannan.co.uk

Approx weights:

Supplied in individual box with instruction sheet.

Dial diameter	Orientation	Net weight	Box weight	Total weight
40mm	Back	50g	8g	58g
40mm	Bottom	68g	6g	74g
50mm	Back	89g	11g	100g
50mm	Bottom	80g	8g	88g
63mm	Back	118g	14g	132g
63mm	Bottom	113g	10g	123g
80mm	Back	TBC	TBC	TBC
80mm	Bottom	168g	13g	181g
100mm	Back	TBC	TBC	TBC
100mm	Bottom	305g	26g	331g

Standard product numbers:

The following are our standard PG010 product numbers. Other PG010 dials are ordered to specific customer specifications. Please use matrix overleaf to create your unique ordering product reference.

PG010 pressure gauges (bar outer scale, psi inner scale)

Range	Range 40mm diameter			50mm diameter		63mm diameter	
bar &	Bottom	Back	Bottom	Back	Bottom	Back	
PSI	connection	connection	connection	connection	connection	connection	
	1/8" BSP	1/8" BSP	1/4" BSP	1/4" BSP	1/4" BSP	1/4" BSP	
0 to 1	-	-	-	-	-	34/441/0	
0 to 1.6	-	-	34/122/0	34/142/0	-	34/442/0	
0 to 2.5	34/023/0	-	34/123/0	34/143/0	-	34/443/0	
0 to 4	34/024/0	34/044/0	34/124/0	34/144/0	34/424/0	34/444/0	
0 to 6	34/025/0	34/045/0	34/125/0	34/145/0	34/425/0	34/445/0	
0 to 10	34/026/0	34/046/0	34/126/0	34/146/0	34/426/0	34/446/0	
0 to 16	34/027/0	34/047/0	34/127/0	34/147/0	34/427/0	34/447/0	
0 to 25	34/028/0	34/048/0	34/128/0	34/148/0	34/428/0	34/448/0	
0 to 40	34/029/0	34/049/0	34/129/0	34/149/0	34/429/0	34/449/0	
0 to 60	-	-	-	-	-	34/480/0	
0 to 100	-	-	-	-	34/461/0	-	
0 to 160	-	-	-	-	34/462/0	34/482/0	
0 to 250	-	-	-	-	34/463/0	34/483/0	
0 to 400	-	-	-	-	34/464/0	34/484/0	
-1 to 0	-	-	-	-	-	34/486/0	
-1 to 3	-	-	-	-	-	34/489/0	
-1 to 5	-	-	-	-	34/468/0	34/488/0	
-1 to 9	-	-	-	-	34/467/0	34/487/0	

Calibration product numbers:

Calibration	No of points	Product number	
UKAS	5pt	49/075/0	
Traceable to	5pt	49/060/0	
National Standards			

Other calibration types available on request





<u>+44 (0)1946 816600</u>

👌 <u>brannan.co.uk</u>

Product numbers:

All PG010 dials are ordered to specific customer specifications. Please use below matrix to create your unique ordering product reference, using the values in bold.

Make	Model	Dial diameter	Range	Units	Connection size	Connection orientation	Extras
Brannan (BRN)	PG010 (PG10)	40mm (40) 50mm (50) 63mm (63) 80mm (80) 100mm (100)	-1 to 9 bar (-1+9) -30 to 130 Hg/Psi (-30+130) through to 0 to 1000 bar (0+1000) 0 to 14500 Psi (0+14500)	Bar only (black)(B) Psi only (black) (P) Bar outer (black) / psi inner (red) (BP) Psi outer (red) / bar inner (black) (PB) kPa outer (black) / Psi inner (red) (KP)	1/8" BSP ₁ (1) 1/8" NPT ₁ (2) 1/4" BSP (3) 1/4" NPT (4) 3/8" BSP ₂ (5) 3/8" NPT ₂ (6) 1/2" BSP ₃ (7) 1/2" NPT ₃ (8) 1/8" BSPT ₁ (9) 1/4" BSPT (10) 3/8" BSPT ₂ (11) 1/2" BSPT ₃ (12) 7/16" UNF (13)	Bottom (BO) Centre back (CB) Lower back, (LB)	Front flange (FF) Back flange (BF)
			NB. 400 bar max for 40mm dial size	Psi outer (red) / kPa inner (black) (PK) NB. Other units available on request	1. Not 80mm or 100mm 2. 80mm & 100mm only 3. 100mm only NB. others available on request	1. 100mm only	NB. Flange for 100mm only. When more than one extra is required, please separate each code with a comma when building your product reference

Order example:

Make	Model	Dial diameter	Range	Units	Connection size	Connection orientation	Extras
BRN	PG10	100	0+10	В	4	во	

Product reference: BRNPG10/100/0+10/B/4/BO

Product accessories:

Please see accessories section of this catalogue for associated items for use with these gauges.

- Syphons
- Gauge cocks
- Adaptors
- Snubbers









