

Product data sheet

✉ sales@brannan.co.uk

☎ +44 (0)1946 816600

🌐 brannan.co.uk

WHIRLING HYGROMETER

Whirling hygrometers, also known as sling psychrometers, employ the “wet” and “dry” bulb principal to determine %RH. These hygrometers are filled with a blue spirit filling and have a fixed handle designed to be rotated, by hand, to provide adequate and consistent ventilation of the bulbs. It is supplied complete in a protective canvas carry case with calculator chart and instructions to determine %RH and two spare wicks. Available in Celcius scale only. Replacement refill tubes are available. These instruments can be supplied with UKAS Certification on request.




Product features:

- Whirling hygrometer using the “wet” and “dry” principle to measure Relative Humidity (%RH)
- Hygrometer designed to be rotated by hand to provide adequate and consistent ventilation of the bulbs
- Environmentally friendly spirit filled thermometer tubes
- Complete with protective pouch, calculator chart and 2pcs replacement wicks

Product specifications:

Temperature range: -5 to + 50°C
Divisions: 0.5°C
Accuracy: +/-1°C
CE & RoHS/WEEE: n/a
Product dimensions: Net: 230 x 130 x 23mm
 Gross: 235 x 136 x 30mm
Product weights: Net: 138.5g
 Gross: 205g (including box, chart and bag)

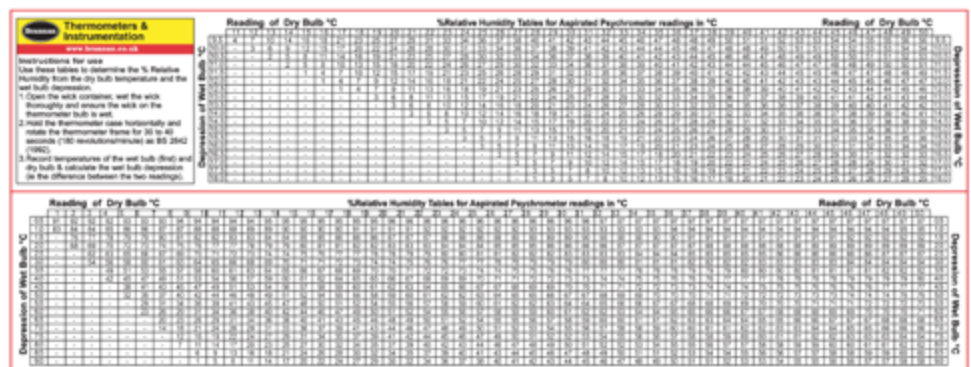

Description	Barcode	Product no
Whirling Hygrometer	5 011405 137456	13/745/2
Pair refill tubes	n/a	13/645/2
Pack of 12 replacement wicks	-	13/086/0

View me on the website

