

Product data sheet

STANDARD ECOLOGY & WEATHER KIT

The Brannan ecology and weather kits provide a selection of weather watcher equipment in a sturdy carry case.

To ensure that meteorological observations are made under the best and most consistent conditions, instruments for outdoor use should be grouped together on a carefully selected site enclosed by open fencing or palings to exclude unauthorised persons or animals. The plot chosen should be on generally level ground covered with short grass and must not be in a hollow or near a steep slope and the site should be well away from trees, bushes, walls or buildings or any other possible obstruction.

Those seeking more detailed information about weather recording are recommended to obtain "The Meteorological Observers' Handbook", from H.M. Stationery Office.



Product features:

- Selection of weather watcher equipment
- Complete with weather register to record measurements
- Supplied in robust carry case with full operating instructions

Contents:

- Mason's hygrometer
- Digital max min thermometer
- Rainfall sprinkler measure
- Soil thermometer
- 150mm wood wall thermometer
- Weather register

Product specifications:

Gross weight: 954g (including 505g case)

Gross dimensions: 320mm x 280mm x 119mm

Description	Barcode	Product no
Standard ecology & weather kit	5 011405 257086	25/708/0
Replacement weather register	N/A	13/062/0

Product data sheet

✉ sales@brannan.co.uk

☎ +44 (0)1946 816600

🌐 brannan.co.uk

MASON'S WET & DRY BULB HYGROMETER

Product features:

- Simple psychrometer to measure water vapour in the atmosphere, on a percentage scale known as Relative Humidity (%RH)
- Includes table to calculate the difference between the “wet” and “dry” bulb temperature to give the %RH reading

Product specifications:

Temperature ranges:	-5 to +50°C&F
Accuracy:	+/- 1°C&F
Divisions:	1°C&F
CE/ROHS/WEEE:	N/A
Hazard information (SDS):	See brannan.co.uk for information
Product material:	Case: polypropylene Scale: polystyrene Reservoir: polyethylene Glass Tube: kerosene filled
Product dimensions:	310mm x 77mm x 32mm
Product weight:	110g

* Supplied in individual box



Description	Barcode	Product no
Masons hygrometer	5 011405 132222	13/222/3
Replacement reservoir pot	-	13/087/0

View me on
the website



Product data sheet

✉ sales@brannan.co.uk

☎ +44 (0)1946 816600

🌐 brannan.co.uk

GARDENER'S SOIL THERMOMETER

This type of soil thermometer is frequently used in the agriculture and horticulture industries to check temperatures of soil and compost. The soil thermometer has a green knob at the top to assist with the location of the thermometer after placement.

Product features:

- 210mm thermometer to check temperature of soil and compost
- Green knob at top of aluminium case to assist with location
- For use in agriculture and horticulture industries

Product specifications:

Temperature range:	-15 to +110°C&F
Divisions:	1°C/2°F
CE/ROHS/WEEE:	N/A
Hazard Information (SDS):	See brannan.co.uk for information
Product material:	Case: aluminium Glass tube: Kerosene filled
Product dimensions :	Stem case length: 210mm Stem case diameter: 9.5mm Knob diameter: 22.5mm Net: ø9.5mm x 210mm Gross: 243mm x 75mm x 24mm
Product weight:	Net: 58.5g Display box: 13.5g Gross: 72g



Description	Barcode	Product No
Gardener's soil thermometer	5 011405 134172	13/417/3

View me on
the website



Product data sheet

✉ sales@brannan.co.uk

☎ +44 (0)1946 816600

🌐 brannan.co.uk

WEATHERPROOF DIGITAL MAX MIN THERMOMETER

Attractive, digital max min thermometer, uniquely designed by Brannan.
Triple display simultaneously shows maximum, minimum and current temperature.
Weatherproof design - suitable for indoor or outdoor use.
Available in choice of white or green case.

Product features:

- Brannan unique weatherproof design
- Maximum, current and minimum readings simultaneously
- High accuracy
- Clear, easy to read LCD
- Hanging hook

Product specifications:

Temperature range:	-20°C to 50°C/°F (switchable)
Accuracy:	+/-1°C
Ingress protection:	IP65
Display resolution:	0.1°C/0.1°F
Sampling rate:	Every 10 seconds
Battery:	1pc x AAA
CE & RoHS/WEEE:	Compliant
Hazard information (SDS):	See brannan.co.uk for information
LCD dimensions:	68.5mm x 50mm
Product dimensions:	148mm x 111mm x 33.5mm
Product weight:	116.5g (incl. battery)



Description	Barcode	Product no
Weatherproof digital max min - white case	5 011405 124326	12/432/3
Weatherproof digital max min - green case	5 011405 124333	12/433/3

View me on
the website



Measurement for life.



Product data sheet

150MM, ENVIRONMENTALLY FRIENDLY, WOOD WALL THERMOMETER

Short wood wall thermometer with clear black Celsius and Fahrenheit scale.

Brannan wood thermometers are manufactured using wood sourced from forests managed in a way that preserves biological diversity and benefits the lives of local people and workers. The forests are managed to strict environmental, social and economic standards.


Packaging sourced from the same standard of forests.

Product features:

- Sustainable wood wall thermometers sourced from forests managed to strict environmental, social and economic standards
- Ethically sourced to protect the biological diversity and benefits of local people and workers
- Ethically sourced, fully recycleable packaging
- Ideally suited to full colour customer branding and design (MOQ apply)
- Suitable for use indoor or outdoor*
- Easy to read, Celsius and Fahrenheit temperature scale
- Made in UK

Product specifications:

Temperature range:	-20 to +50°C&F**
Divisions:	1°C/2°F
Accuracy:	+/- 1.0°C @ 10°C
CE/ROHS/WEEE:	N/A
Hazard information (SDS):	See brannan.co.uk for information
Product material:	Beech wood mounting with kerosene filled glass tube
Component weights:	Wood: 25.5g Glass: 4g
Product dimensions :	150mm x 35mm x 8mm
Product weight:	29.5g

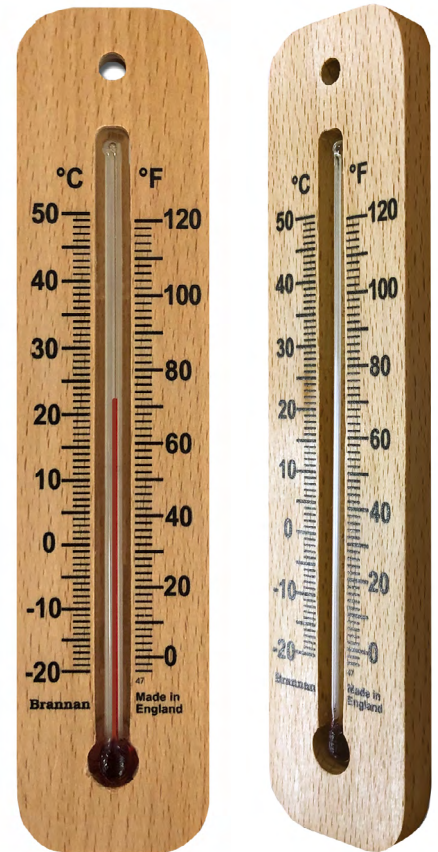

Description	Barcode	Product no
Short wood wall thermometer	5 011405 142108	14/210/3

Please note: Due to the nature of the material, wood colours may vary slightly from those illustrated.

* If using outdoors, please site in protected position, away from direct sunlight to prolong the life of your thermometer.

**Scale ranges may differ slightly from those advertised due to manufacturing procedures

Product data sheet

✉ sales@brannan.co.uk

☎ +44 (0)1946 816600

🌐 brannan.co.uk

RAINFALL SPRINKLER MEASURE

A simple gauge in translucent material calibrated in inches and millimetres.

Product features:

- 100mm diameter rain gauge
- Measuring in inches and millimetres
- Rainfall capacity up to 400ml
- Supplied with rainfall charts. Replacements available

Product specifications:

Range:	0 to 50mm / 0 to 2in
Divisions:	0.5mm / 0.05in
CE/ROHS/WEEE:	N/A
Hazard information (SDS):	See brannan.co.uk for information
Product material:	Crystal styrene
Product dimensions :	ø100mm x 210mm
Product weights:	72g



Description	Barcode	Product no
Rainfall sprinkler measure	5 011405 134141	13/414/3
Replacement rainfall record charts	n/a	13/063/0

View me on
the website

