

ASR040/ASU040

✉ sales@brannan.co.uk

☎ +44 (0)1946 816600

🌐 brannan.co.uk

Stainless steel syphons for pressure gauge



Product features:

- Reduces the process temperature to protect the pressure instrument.
- For use with liquids, gases, and vapours
- Protects from pressure spikes and pulsations
- Choice of materials for a variety of different applications
- Can be used in combination with a shut off valve
- Ring/Coil type (ASR040) for vertical installation
- U type (ASU040) for horizontal installation
- **Brannan** quality

Product applications:

- Oil and gas
- Chemical and petrochemical
- Water and wastewater

Product specifications:

Type	U type or Ring type
Pressure & temperature ratings	100 bar @ 100°C 95 bar @ 150°C 85 bar @ 250°C 80 bar @ 300°C 70 bar @ 350°C 63 bar @ 400°C
Instrument connection	1/2" female/male
Process connection	1/2" female/male
Body material	SS 316, SS 316L, carbon steel
Pipe schedule	SCH 40, SCH 80

ASR040/ASU040

✉ sales@brannan.co.uk


☎ +44 (0)1946 816600

🌐 brannan.co.uk


Stainless steel syphons for pressure gauge

Product dimensions:

ASU040 - U type syphon

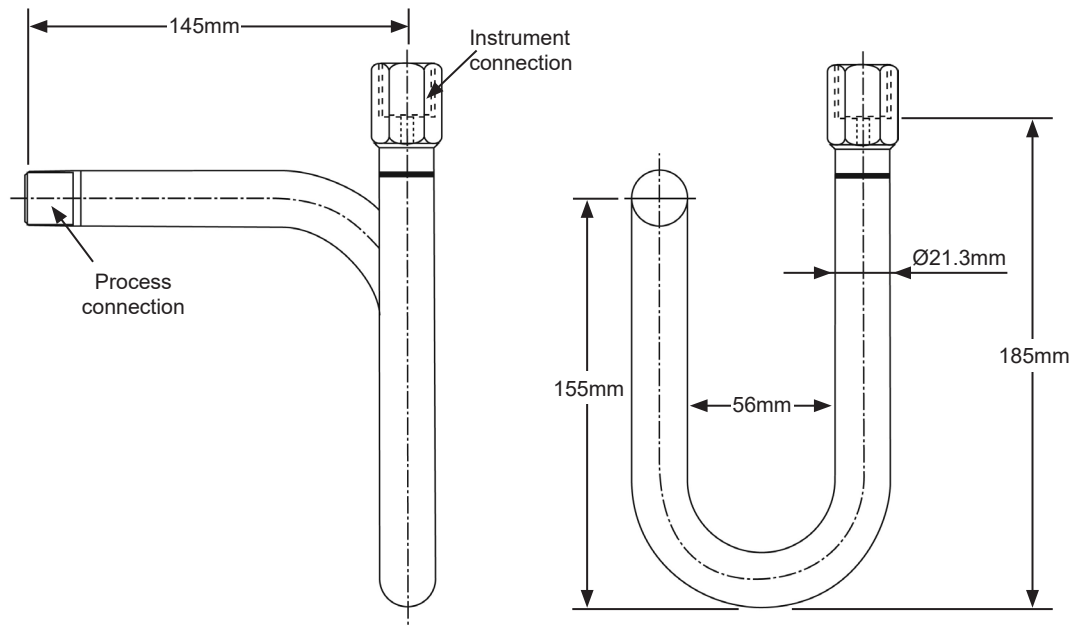

ASR040 - Ring type syphon

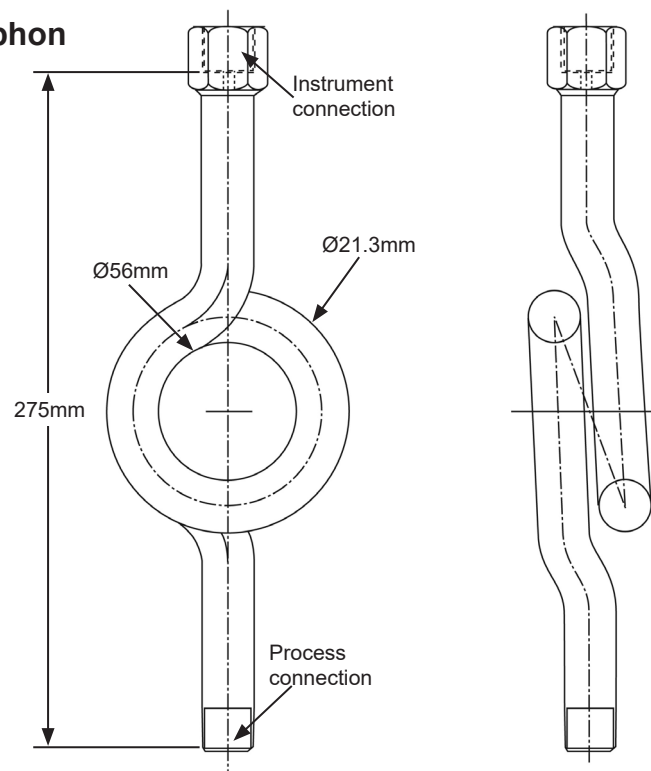

Measurement for life.

Brannan

ASR040/ASU040

 sales@brannan.co.uk

 +44 (0)1946 816600

 brannan.co.uk

Stainless steel syphons for pressure gauge

Product numbers:

All ASU040 and ASR040 syphons are ordered to specific customer specifications. Please use below matrix to create your unique ordering product reference, using the values in bold.

Make	Model	Wetted material	Process/instruments connection	Connection size & type	Schedule	Extras
Brannan (BRN)	U type (ASU040)	SS316 (316)	Female to Female (FF)	1/2" x 1/2" BSP (7)	U type SCH 40 (U40)	Materials test certificate (MTC)
	Ring type (ASR040)	SS316L (316L)	Male to Male (MM)	1/2" x 1/2" NPT (8)	Ring type SCH 40 (R40)	
		Carbon steel (CAR)	Male to Female (MF)	1/2" x 1/2" BSPT (12)	Ring type SCH 80 (R80)	

Order example:

Make	Model	Wetted material	Process/instruments connection	Connection size & type	Schedule	Extras
BRN	ASU040	316	MF	8	U40	MTC

Product reference: BRNASU040/316/MF/8/U40/MTC