

# THERM-cert™ range

## Product data sheet

✉ [sales@brannan.co.uk](mailto:sales@brannan.co.uk)

☎ +44 (0)1946 816600

🌐 [brannan.co.uk](http://brannan.co.uk)

### PRE-CALIBRATED 255MM PLASTIC WALL WORKPLACE THERMOMETER

255mm wall thermometer pre-calibrated as part of the Brannan THERM-cert™ range.


Robust thermometer moulded in white plastic with recommended temperature for workplace in accordance with The Workplace (Health, Safety & Welfare) Regulations 1992 Section 7).

#### Product features:

- Supplied with traceable calibration certificate
- Clear temperature scale in Celsius and Fahrenheit
- Heavy duty moulding, suitable for indoor or outdoor use
- Recommended temperature highlighted - 16°C
- Made in England

#### Product specifications:

<b>Temperature range:</b>	-20 to 50°C & 0 to 120°F
<b>Divisions:</b>	1°C & 2°F
<b>Accuracy:</b>	+/-1°C
<b>CE &amp; RoHS/WEEE:</b>	N/A
<b>Hazard information (SDS):</b>	See <a href="http://brannan.co.uk">brannan.co.uk</a> for information
<b>Product material:</b>	Moulding: ABS Glass tube: kerosene filled
<b>Component weights:</b>	Plastic: 64g Glass tube: 6g
<b>Product dimensions:</b>	Net: 255mm x 70mm x 11mm Gross: 340mm x 250mm x 30mm
<b>Product weight:</b>	Net: 70g Card packaging: 20.5g Gross: 105g (incl. certificate & packaging)

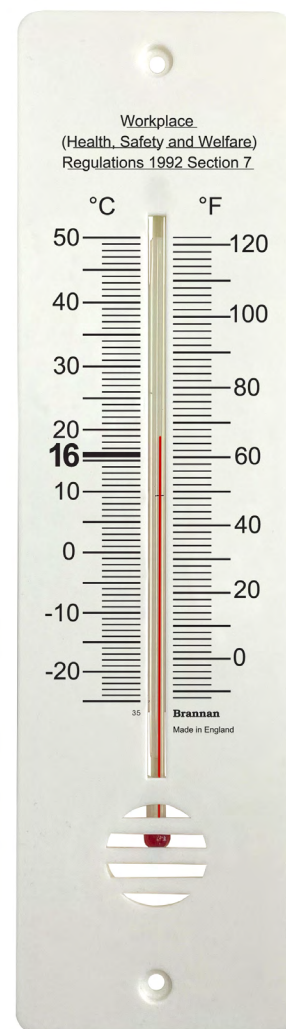

Description	Calibration points	Product no
THERM-cert™ pre-calibrated 255mm plastic workplace thermometer	1 fixed points at 16°C	TC-016

**TRACEABLE CALIBRATION CERTIFICATE**

ISSUED BY : S Brannan and Sons Limited

CALIBRATION DATE	CERTIFICATE NUMBER	SERIAL NUMBER

S. Brannan and Sons Ltd  
Lancaster Industrial Estate  
Carter Road  
Cumbria  
ENGLAND  
CA9 5GE

**Brannan**  
Thermometers  
and Gasps

Telephone: 01946 816600  
Fax: 01946 816601  
Email: [sales@brannan.co.uk](mailto:sales@brannan.co.uk)  
Website: [www.brannan.co.uk](http://www.brannan.co.uk)  
Registered No: 128673 ENGLAND

Instrument Type: 255MM WORKPLACE THERMOMETER  
Range: -25/+50°C/°F

Thermometer Reading	Lab Temperature	Emergent Column Temperature	Standard Instrument References
15.5	16.0	N/A	246801/1 246801/2

Signed: Calibration Assistant and Approved Signatory

Laboratory Temperature 20°C +/- 5°C  
Laboratory Humidity 20% to 90%

S. Brannan and Sons operate an ISO9001 certified Quality Management System in order to ensure the accuracy and reliability of every instrument we produce.  
The readings were determined by comparison with traceable standard instruments, the reference numbers of which are shown above.  
We recommend that periodic recalibration should be carried out on this instrument yearly, but the recalibration frequency to be determined by the user depending upon the frequency and conditions of use, as well as the level of accuracy required by the process.