

THERMcert™ range

Product data sheet

✉ sales@brannan.co.uk

☎ +44 (0)1946 816600

🌐 brannan.co.uk

PRE-CALIBRATED 255MM PLASTIC WALL WORKPLACE THERMOMETER

255mm wall thermometer pre-calibrated as part of the Brannan THERMcert™ range.


Robust thermometer moulded in white plastic with recommended temperature for workplace in accordance with The Workplace (Health, Safety & Welfare) Regulations 1992 Section 7).

Product features:

- Supplied with traceable calibration certificate
- Clear temperature scale in Celsius and Fahrenheit
- Heavy duty moulding, suitable for indoor or outdoor use
- Recommended temperature highlighted - 16°C
- Made in England

Product specifications:

Temperature range:	-20 to 50°C & 0 to 120°F*
Divisions:	1°C & 2°F
Accuracy:	+/-1°C
CE & RoHS/WEEE:	N/A
Hazard information (SDS):	See brannan.co.uk for information
Product material:	Moulding: ABS Glass tube: kerosene filled
Component weights:	Plastic: 64g Glass tube: 6g
Product dimensions:	Net: 255mm x 70mm x 11mm Gross: 340mm x 250mm x 30mm
Product weight:	Net: 70g Card packaging: 20.5g Gross: 105g (incl. certificate & packaging)

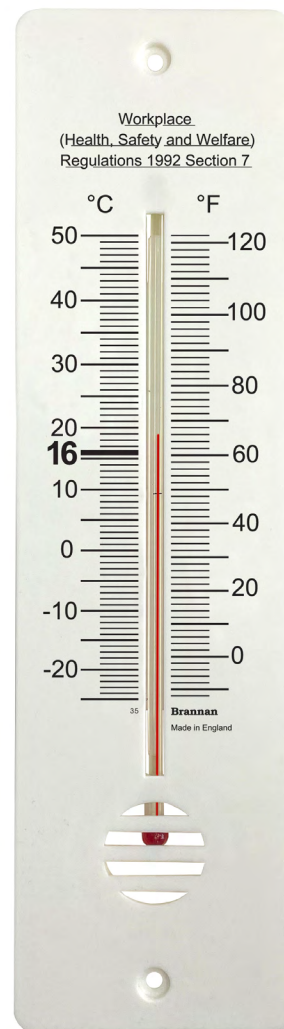

Description	Calibration points	Product no
THERMcert™ pre-calibrated 255mm plastic workplace thermometer	1 fixed points at 16°C	TC-016

* PLEASE NOTE: Scale ranges may differ slightly from those advertised due to manufacturing procedures

TRACEABLE CALIBRATION CERTIFICATE

ISSUED BY : S Brannan and Sons Limited

CALIBRATION DATE	CERTIFICATE NUMBER	SERIAL NUMBER
S. Brannan and Sons Ltd Leicestershire Industrial Estate Cotter Road Cotter SHROPSHIRE SHR5 3GE Brannan Thermometers and Gasps Telephone: 01946 816600 Fax: 01946 816601 Email: sales@brannan.co.uk Website: www.brannan.co.uk Registered No: 128673 ENGLAND		
Instrument Type: 255MM WORKPLACE THERMOMETER Range: -25/+50°C / -15/+120°F		
Thermometer Reading	Lab Temperature	Emergent Column Temperature
15.5	16.0	N/A
		Standard Instrument References
		246801/1 246801/2

Signed: Calibration Assistant and Approved Signatory

Laboratory Temperature 20°C +/- 5°C Laboratory Humidity 20% to 90%

S. Brannan and Sons operate an ISO9001 certified Quality Management System in order to ensure the accuracy and reliability of every instrument we produce.
The readings were determined by comparison with traceable standard instruments, the reference numbers of which are shown above.
We recommend that periodic recalibration should be carried out on this instrument yearly, but the recalibration frequency is best determined by the user depending upon the frequency and conditions of use, as well as the level of accuracy required by the process.