

THERMcert™ range

Product data sheet

✉ sales@brannan.co.uk

☎ +44 (0)1946 816600

🌐 brannan.co.uk



PRE-CALIBRATED VERTICAL BARREL DIGITAL TEST THERMOMETER

High accuracy thermometer pre-calibrated at two fixed temperature points as part of the Brannan THERMcert™ range.

Electronic test thermometer with vertical display and 125mm stainless steel probe with pocket case and clip. Probe thermometers can be supplied with UKAS calibration certificate or statement of conformity on request. Packed in individual box with battery and full operating instructions. Recalibration of your thermometer is recommended on an annual basis to ensure continued accuracy. Please contact our sales team for information.

Product features:


- High accuracy thermometer supplied with traceable calibration certificate
- Stainless steel probe thermometer
- Protective case and pocket clip
- Battery and full instructions included

Product specifications:

Temperature range: -50 to +200°C/°F
Ambient temperature: -10 to +50°C/°F
Accuracy: -50 to -21°C: +/-4°C
 -20 to -1°C: +/-2°C
 0 to 100°C: +/-1°C
 101 to 150°C: +/-2°C
 151 to 200°C: +/-4°C

Recommended minimum immersion length:

50mm*
Resolution: 0.1°C
Sampling rate: 1 second
Auto power off: After 45 minutes
Battery: LR44 x 1 pc
Average battery life: Approx 1500 hours
CE/ROHS/WEEE: Compliant
Hazard information (SDS): See brannan.co.uk for information
LCD dimensions: 18mm x 8mm
Probe dimensions: 125mm x ø3.75mm (reducing to ø2.5mm)
Product dimensions: Net: 195mm x 21mm x 21mm
 Gross: 275mm x 240mm x 35mm
Product weight: Net: 21g (including battery)
 Display box: 10.5g
 Gross: 47.5g (incl. certificate and packaging)

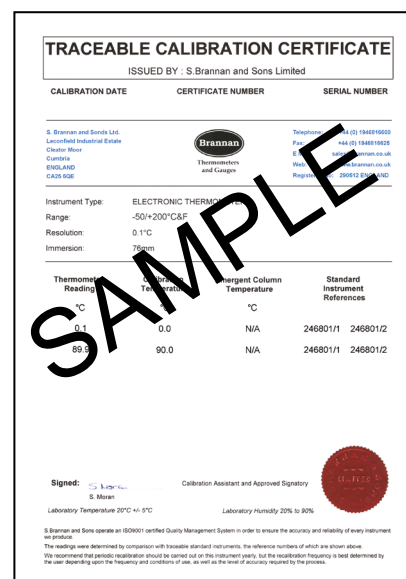

Description	Calibration points	Product no
THERMcert™ pre-calibrated vertical barrel digital test thermometer	2 fixed points at 0 and 90°C	TC-015
Recalibration product reference: TC-015-RECALIBRATION		

* The thermometers will operate at shorter immersions, however the stated accuracy cannot be maintained.



Measurement for life.

